



Leo Under Bed

Assembly Instructions


Fixing List



Bolt F
Confirmat
Bolts (small) x
12



Base slat screws
X 24

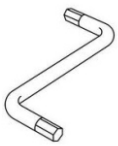

1x

Contents List

Side long panel x 2
End short Panel x x2
Base slats x 12



Step 1. You will have two universal headboards and two universal side rails.

Please one headboard at the end with the three holes to the bottom, then locate a side rail.



Step 2. Using three confirmat bolts per corner now attach.. Repeat for each corner.



Step 3. Now get the base slats and space evenly along the bed. Make sure the base slats butt in on one side rail, then screw in. Go to the opposite side and locate the centre

This is a glide underbed, very stable and strong. No castor wheels are required, just pull out when required..