

Pine Ladder Assembly Instructions

Fixings Required



Bolt K x1
Allen Key



Bolt L - Small screws
Wood slat screws x 6



Bolt F
Confirmat Bolt
(Small) x 20




Bolt H x 2
Bunk bed ladder hooks
Use to attach ladder, fix with small
screws



The ladder consists of two ladder struts and ladder rungs. Position these as per the picture opposite (Number of steps will depend on model)



You will find two hooks. Using the small screw attach these to the inside of the two slanted ladder struts.

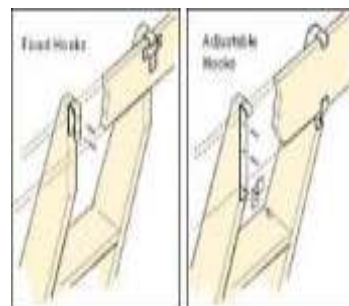

When installed the ladder rungs need to be tight. The holes on the ladder struts have been mis-drilled by 2mm to ensure a tight fitting. Locate each ladder to the holes on the long struts. Using the small confirmat bolt dip them in the glue and push BOTH through the strut, you will note they will not quite meet the hole on the step.

To meet the holes on the step the bolts will be at an angle, this is correct. Locate these over to the holes and screw both the bolts in evenly. This is important, **DO NOT** tighten one at a time. Both together, The bolts will align and pull the ladder step in. This ensures a tight fixing. Complete one side then go to the next. Once all the ladder steps have been attached hook over the side rail and attach using a small screw. Again the hook is designed to be tight to prevent the ladder from wobbling, you may need to knock down using a hammer.

AFTER SALES SERVICE

To request replacement parts, download instructions or see assembly videos please click below or scan QR code

www.strictlyaftersales.co.uk

Email assistance: help@strictlybedsandbunks.co.uk

